

Calibrating Your Metal Stem Dial Thermometer!

Brought to you by the Hawaii State Dept. of Health


UH OH!
47° F, THAT'S TOO
HIGH! IT SHOULD
BE 32° F.



Fill cup with crushed ice. Let stabilize for approximately 2 minutes.



Hold calibration lever at underside of face, while still keeping dimple on stem immersed in ice/water and turn face until pointer is at 32° F.

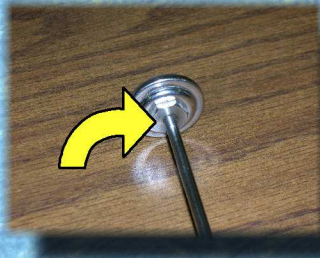

NOW YOU'VE GOT 32° F! GOOD JOB!!

